

SLUSHIE MACHINE INSTRUCTIONS

- DO NOT USE AN EXTENSION CORD!
- DO NOT USE ANY ICE IN THE MACHINE!
- DO NOT USE ANY LIQUID THAT CONTAINS PULP, SEEDS, ETC.!
- DO NOT USE ONLY WATER!
- DO NOT USE KOOL-AID!

SUGAR CONTENT MUST BE CORRECT!

***TO LITTLE SUGAR WILL RESULT IN ICE BUILD UP ON BARREL
AND SEVERE DAMAGE WILL OCCUR!!***

***TO MUCH SUGAR or ALCOHOL WILL RESULT IN LACK OF
FREEZING!!***

- ❑ MACHINE **MUST** BE PLACED ON LEVEL SURFACE. YOU CAN MAKE SLIGHT ADJUSTMENTS WITH THE LEGS.
- ❑ TEMPERATURE SWITCHES MUST BE IN THE “SNOWFLAKE” POSITION and ALL WHITE FLIP SWITCHES ON TIMER MUST FACE OUTWARD
- ❑ THE BACK SIDE HAS A WHITE TURN DIAL WITH ADJUSTMENT 1-4, THIS IS THE DENSITY DIAL. IT IS SET TO MEDIUM, ADJUST AS NECESSARY WITH 4-COLDEST and 1-WARMEST TO THIN OR THICKEN MIXTURE.
- ❑ MUST HAVE PROPER VENTILATION AROUND MACHINE WHEN IN USE.
- ❑ USE CAUTION WHEN LIFTING THE MACHINE, IT IS EXTREMELY HEAVY.
- ❑ IF YOU USE YOUR OWN SOLUTION, PT&E CANNOT GUARANTEE RESULTS

FRUSHEEZ RECIPE:

APPROXIMATELY 2 - 2½ HOURS PRIOR TO USE, ADD THE FOLLOWING:

(NON ALCOHOLIC)

USE 2 GALLONS COLD WATER and ½ GALLON CHILLED FRUSHEEZ MIX for each drink cylinder. Cylinder must be completely slushy to dispense without getting liquid. Adjust chill setting as necessary to keep from getting too thick or thin. **THE MACHINE NEEDS TO BE RANDOMLY SUPERVISED AT ALL TIMES!**

(WITH ALCOHOL) For best results.... Start as directed for non-alcoholic slushies above. Add alcohol to your cup, then add the slushy mix. If you want to do all-in-one.

START WITH 2 GALLONS OF COLD WATER & ½ GALLON OF CHILLED FRUSHEEZ MIX

(ONCE THE MACHINE HAS ACHIEVED A COMPLETE SLUSH CONDITION)

ADD UP TO A ½ GALLON OF COLD ALCOHOL OF YOUR CHOICE TO THE SLUSH. IT WILL TAKE APPROX. 1-2 ADDITIONAL HOURS TO RE-SLUSH THE THINNED MIXTURE. WITH ALCOHOL THE MIX WILL **NOT** REACH THE SAME SLUSH CONSISTANCY.

SLUSHIE MACHINE CLEANING:

DO NOT TAKE MACHINE APART.

FILL EACH SIDE (DBL) WITH WARM SOAPY WATER AND DISPENSE UNTIL THOROUGHLY RINSED. WITH A SOFT CLOTH WIPE DOWN ALL SIDES INSIDE AND OUT OF THE MACHINE.

**TURN OFF MACHINE IMMEDIATELY IF CLUNKING IS HEARD OR
IF LARGE CHUNKS OF ICE ARE SEEN!!**

If the machine is not working for you..... Party, Tents & Events will send out a technician at your request. If the above mentioned guidelines have not been met, a \$100.00 service charge will be added to your rental.

707-544-4132

If a complaint is received, Party, Tents & Events will test the machine with our solution. If the machine is found to be working properly, you will be charged for the rental AND the test solution!!