



WHEN LOOKING AT THE FRONT OF THE POPCORN MACHINE, THERE ARE THREE (3) SWITCHES AS FOLLOWS:

**KETTLE
HEAT**

**KETTLE
MOTOR**

**LIGHTS &
WARMER**

6 EASY STEPS TO POP THE BEST POPCORN:

- 1) Turn all switches to **"ON"**
- 2) **For the 1st batch only,**
Let the kettle heat about 4 minutes.
- 3) Add the oil bar, then the popcorn seeds.
- 4) Dump the kettle when popping is about 95% completed.
- 5) Repeat steps 3 & 4 and always pop at least 5 batches of popcorn every time you pop.
- 6) **For final batch only,**
Turn the Kettle Heat Switch **"OFF"** as soon as corn starts popping rapidly (to raise kettle lid)

WARNING! Keep kettle switches **"OFF"** when not popping.

CARE & CLEANING INSTRUCTIONS:

- Unplug this unit before cleaning.
- **DO NOT** clean this machine with Windex or other ammonia cleaners: It will damage the finish and doors.
- Remove any extra kernels or loose popcorn from machine. Use a non-abrasive sponge or cloth with mild, warm/hot soapy water to wipe out machine.